

HMD Crest Max Back Cover Replacement

Introduction

Follow this guide to replace a cracked or damaged back cover on your HMD Crest Max smartphone.

Tools needed

- 1 × SIM Card Eject Tool
- 1 × Opening Pick
- 1 × Tweezer

To reassemble your device, follow these instructions in reverse order.


Disassembly Steps

Step 1: Eject the SIM card tray




- Turn off your device and remove all attached cables
- Take the SIM opener tool and push the opener tool in the SIM tray hole on the upper left side of the device until the SIM tray pops out
- Remove the SIM card tray

Step 2: Separate the back cover

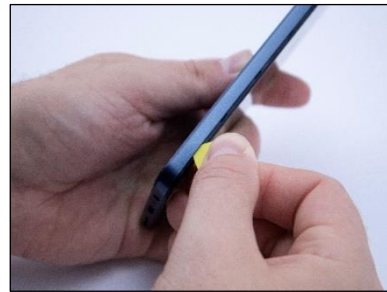

- Insert the opening tool under the small edge in the SIM card tray slot
- Slide the opening tool along the side
- Continue to slide the opening tool around the corner to the bottom side

Step 3: Continue sliding

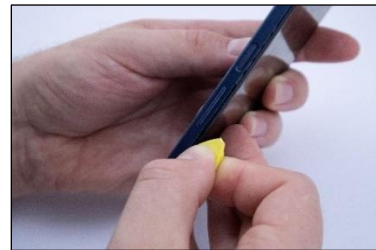


- Continue sliding the opening tool along the bottom side
- Slide the opening tool along the other side of the phone
- Continue to slide the opening tool along the other side of the phone and through the top side

Step 4: Open the Back Cover




- When reached around, check the phone carefully that the back cover is released on all sides
- Flip the back cover carefully
- Take care not to strain or tear the attached fingerprint reader cable during this procedure

Step 5: Remove the Fingerprint Cable

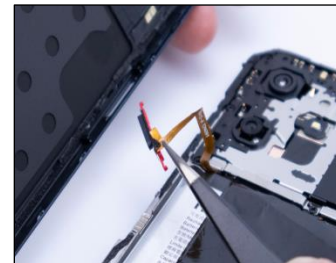

- Take a note of the actual location and position of fingerprint reader cable for later assembly
- Use the tweezers to lift the fingerprint reader out of back cover
- Remove the fingerprint reader
- Now you can remove the back cover from the device

Step 6: Remove the Volume Button

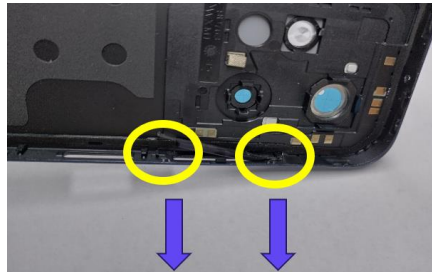

- Locate the volume button at the edge of the back cover
- By using the tweezers remove the volume button
- Grab an edge and remove it from the back cover. Do the same from the other edge of the button.
- Remove the volume button. Please keep this part for the assembly.